


Modification des touches d'un téléphone Yealink.

- 1- Vous connecter à la plateforme web fourni avec vos accès :

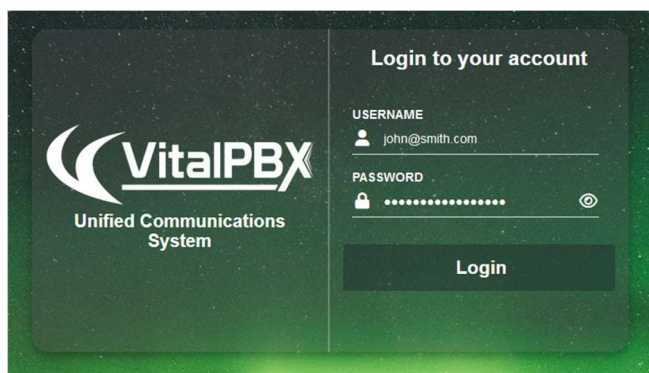


- 2- Vous devrez entrer les informations fournies dans votre courriel de bienvenue.


Username : entrez l'information telle que fournie dans le courriel

Password : entrez l'information telle que fournie dans le courriel

- 3- Cliquez sur **PBX / Provisioning / Provisioning**

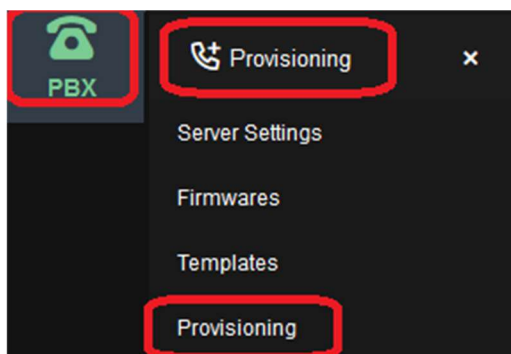


- 4- Sélectionnez l'appareil à modifier en cliquant sur Éditer (Bouton vert)



- 5- Cliquez sur :



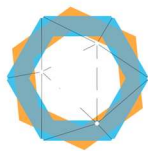

6- Nous devons activer le « Overwrite Template » pour activer les boutons.

Keys	Overwrite Template	Type	Description	Value	Extension	Line
1	☒	Line	228 Joe	228	228	Line 1
2	☒	Line	228 Joe	228	228	Line 1
3	☒	BLF	229 Employe	229	*07	Line 1
4	☒	Speed Dial	Cellulaire Corpo	4185555555		Line 1
5	☒	Speed Dial	Poste specifique 201	4185555555	201	Line 1
6	☒	Paging	Page partout	601	*07	Line 1
7	☒	Call Park	701 Parking1	701	*07	Line 1
8	☒	Intercom	600 Intercom	600	*07	Line 1

7- Voici les **Type** de bouton disponible pour vous.

BLF	Voyant lumineux informant l'état du poste (en ligne, appel entrant ou disponible)
Speed Dial	(Composition abrégée) – un numéro externe – local, national ou International
Paging*	Pour faire sonner plusieurs postes en même temps à l'interne
Call Park*	Appel en attente visible sur plusieurs postes
Intercom*	Pour effectuer un appel sur les haut-parleurs de plafond et/ou des téléphones

*** Fonction qui doit avoir été activée et configurée par notre équipe au paravent.**

8- Description

Entrez la description générale du bouton qui sera programmé. Veuillez noter qu'il s'agit d'une référence visuelle et elle aura un impact sur téléphone. Ne jamais utiliser de ponctuation (à moins d'avis contraire)

9- Value

Entrez le numéro du poste, le # de téléphone ou la valeur correspondants

10- Extension

Entrez *07 si c'est un poste à l'interne (BLF). Laissez le champ libre si c'est un speed dial simple ou entrez le numéro du poste souhaiter si vous désirez mettre une pause et composez un poste. Ex : Je veux joindre Joe de Corposolution au 418-204-2624, poste 228. Dans le value du speed Dial, j'entre le 4182042624 et dans Extension j'entre 228. Donc mon speed dial va composer le # ensuite le poste souhaité via une pause.

11- Line- Si on a plusieurs comptes sur le poste on peut sélectionner quel compte utilisé pour le bouton.

12- Cliquez sur  Update et redémarrez le téléphone par la suite.

Voici une liste d'exemple à titre de référencement :

- Pour ajouter un nouveau poste ex : Solange au 229
Mode : BLF **Description :** Solange **Value :** 229 **Extension :** *07
- Pour ajouter le Cellulaire Corpo.
Mode : Speed Dial **Description :** Cellulaire Corpo **Value:** 4185551234 **Extension :**
- Pour ajouter le numéro d'un fournisseur ABC avec poste
Mode : Speed Dial **Description :** ABC poste 201 **Value** 4185551234,,201 **Extension :**
- Pour ajouter un paging (contactez Corposolution pour la configuration initiale)
Mode : Paging **Description :** Page partout **Value:** 601 **Extension :** *07
- Pour ajouter un parking d'appel (contactez Corposolution pour la configuration initiale)
Mode : Call Park **Description :** 701 Parking 1 **Value:** 701 **Extension :** *07
- Pour ajouter un intercom (contactez Corposolution pour la configuration initiale)
Mode : Intercom **Description :** 600 Intercom **Value :** 600 **Extension :** *07

Modifying Yealink Phone Keys.

- 1- Connect to the web platform provided with your login credentials :




- 2- Enter the information provided in your welcome email.


Username : Enter the information exactly as provided in the email.

Password : Enter the information exactly as provided in the email.

- 3- Click on PBX / Provisioning / Provisioning

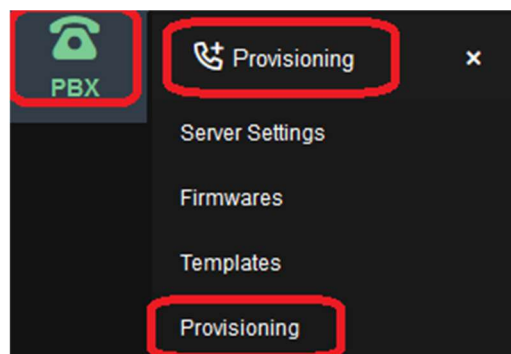


- 4- Select the device to modify by clicking **Edit** (green button).



- 5- Click on :



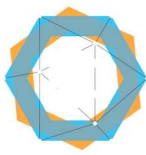

6- Enable **Overwrite Template (YES)** to activate the buttons.

Keys	Overwrite Template	Type	Description	Value	Extension	Line
1	☒	Line	228 Joe	228	228	Line 1
2	☒	Line	228 Joe	228	228	Line 1
3	☒	BLF	229 Employee	229	*07	Line 1
4	☒	Speed Dial	Cellulaire Corpo	4185555555		Line 1
5	☒	Speed Dial	Poste spécifique 201	4185555555	201	Line 1
6	☒	Paging	Page partout	601	*07	Line 1
7	☒	Call Park	701 Parking1	701	*07	Line 1
8	☒	Intercom	600 Intercom	600	*07	Line 1

7- Here are the available **button types**:

- BLF** Light indicator showing the extension status (busy, incoming call, or available)
- Speed Dial** External number (local, national, or international)
- Paging*** Allows multiple internal extensions to ring simultaneously
- Call Park*** Places a call on hold visible from multiple phones
- Intercom*** Allows announcements through ceiling speakers and/or telephone speakers

*** These functions must have been previously enabled and configured by our team.**

8- Description

Enter the general description of the button being programmed.

Please note that this is a visual reference displayed on the phone. Do not use punctuation unless otherwise instructed.

9- Value

Enter the extension number, phone number, or corresponding value.

10- Extension

Enter ***07** if it is an internal extension (BLF). Leave the field blank for a simple speed dial or enter an extension number if you want the system dial or and then dial an extension.

Example:

If you want to call Joe at Corposolution at **418-204-2624 extension 228**:

In the **Value** field, enter: **4182042624**

In the **Extension** field, enter: **228**

11- If multiple accounts are configured on the phone, you can select which account will be used for the button.

12- Click on the  **Update** button and restart the phone afterward.

Examples for Reference

To add a new extension — Example: Solange at extension 229

Mode: BLF	Description: Solange	Value: 229	Extension: *07
------------------	-----------------------------	-------------------	-----------------------

To add the Corpo mobile phone

Mode: Speed Dial	Description: Corpo Mobile	Value: 4185551234	Extension: <i>(leave blank)</i>
-------------------------	----------------------------------	--------------------------	---------------------------------

To add a supplier number with extension

Mode: Speed Dial	Description: Supplier 201	Value: 418555-1234,,201	Extension: <i>(leave blank)</i>
-------------------------	----------------------------------	--------------------------------	---------------------------------

To add Paging (contact Corposolution for initial configuration)

Mode: Paging	Description: Page All	Value: 601	Extension: *07
---------------------	------------------------------	-------------------	-----------------------

To add Call Park (contact Corposolution for initial configuration)

Mode: Call Park	Description: 701 Parking 1	Value: 701	Extension: *07
------------------------	-----------------------------------	-------------------	-----------------------

To add an Intercom (contact Corposolution for initial configuration)

Mode: Intercom	Description: 600 Intercom	Value: 600	Extension: *07
-----------------------	----------------------------------	-------------------	-----------------------